StationBox® ALU&ALU CC Package Contains

RF ELEMENTS®

Contents: StationBox®ALU
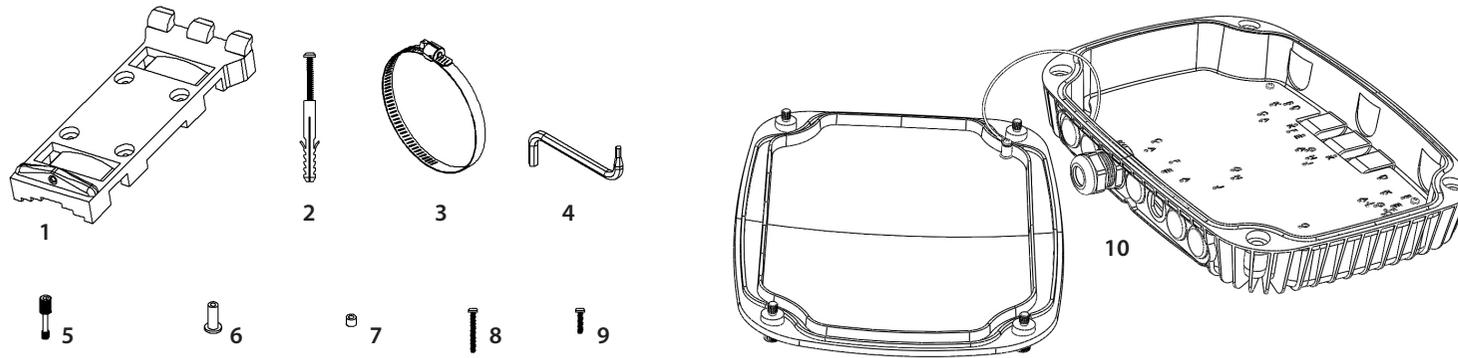
|	
1	Bracket
2	3,5×45mm screw with wall plug, 4pcs
3	Hose Clamp 50-70 mm, 2pcs
4	Alen Key 3-5 mm
5	M4 Captive Screw
6	Spacer 18 mm, 4pcs
7	Spacer 5mm, 4pcs
8	2,9 × 25mm screw, 4pcs
9	2,9 × 13mm screw, 4pcs
10	Body

Contents: StationBox®ALU CC
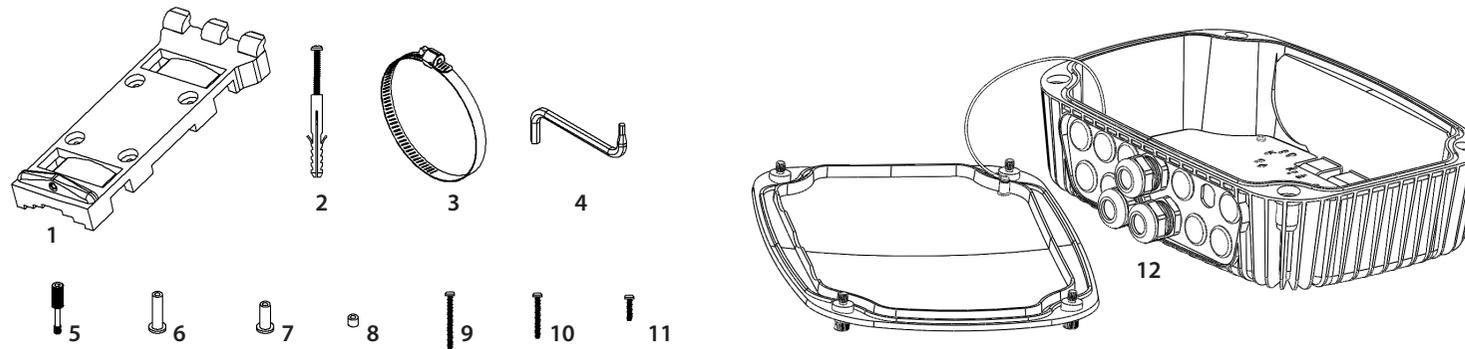
1	Bracket
2	3,5×45mm screw with wall plug, 4pcs
3	Hose Clamp 50-70 mm, 2pcs
4	Alen Key 3-5 mm
5	M4 Captive Screw
6	Spacer 25,3 mm, 4pcs
7	Spacer 18 mm, 4pcs
8	Spacer 5mm, 4pcs
9	2,9 × 32mm screw, 4pcs
10	2,9 × 25mm screw, 4pcs
11	2,9 × 13mm screw, 4pcs
12	Body

Spacer Positions	A	RB711 / RB411 / RB433 / RB435	C	Alix3	E	RouterStation	F, H, J - Not specified, use when fits your equipment
	B	Alix2/Alix6	D	RouterStation PRO	G	RW2458N	

R F ELEMENTS®

1 Open the enclosure and remove the parts packed inside.

2 Remove red silicone caps and install desired amount of pigtails. Use only sealed pigtails (with O-ring).

3 Install selected board using spacers and screws.
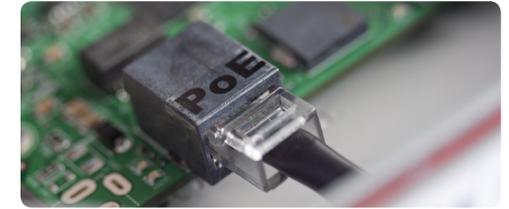
4 Connect the cables to the board

5 Close the enclosure and tighten the screws.

6 Attach bracket to the mast using hose clamps. Clamps shall be as much to the outer edge of bracket, as possible.

7 Secure the M4 screw.

8 Installation on the Wall. Attach bracket to the wall using wall plugs and screws. Than install the enclosure and secure the M4 screw.